



Jolla C or Intex Aqua Fish Teardown

Basic disassembly of the Jolla C (mostly the same as the Intex Aqua Fish)


Written By: Jos Wagenmakers



INTRODUCTION

Basic disassembly of the Jolla C (mostly the same as the Intex Aqua Fish)

Step 1 — Phone & Back Cover

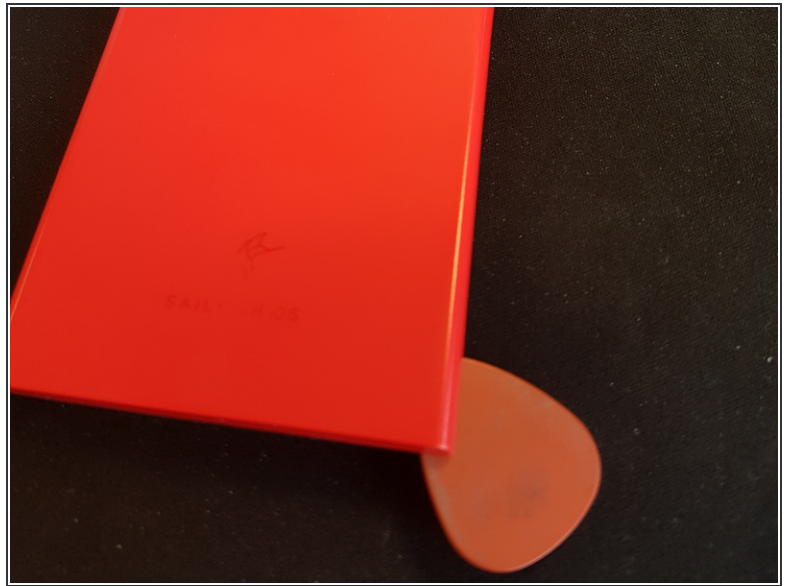

- Remove the back cover, starting at the bottom right corner with your nail or a prying tool

Step 2 — Battery, Sims & SD





- Remove the battery
- Remove all sim-cards
- Remove the microSD-card

Step 3 — Middle Cover





- Remove all 14 cross-head screws
- Use a prying tool to separate the middle cover from the phone, working from the bottom slowly up to the top
- Watch out for the power and volume buttons, which probably fall out of the device.

Step 4 — Top Circuit Board

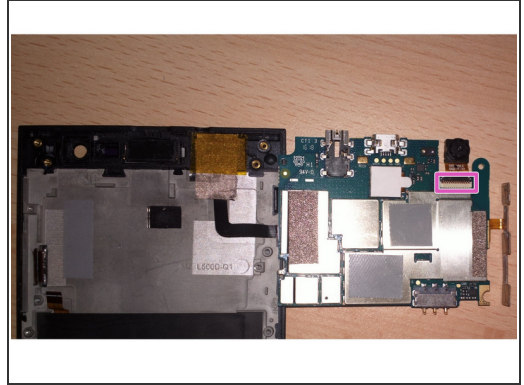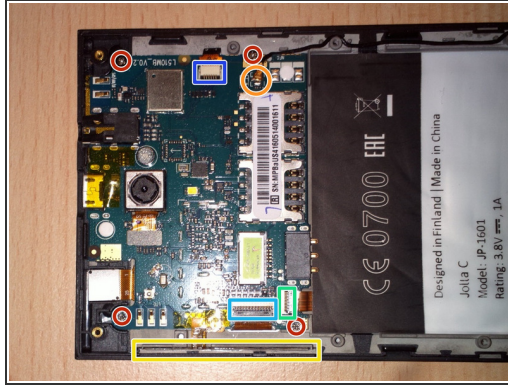

- Remove all cross-head screws
- Remove the antenna wire from the circuit board
- Pry loose the power & volume button part at the side (it is stuck to the phone with sticky tape) and pull it out
- Pull out the connector for the bottom circuit board
- Pull out the screen connector
- Pry loose the connector for the proximity sensor etc
- ❗ Now you can remove the top circuit board
- Remove the main and front camera connectors

Step 5 — Bottom Cuircuit Board

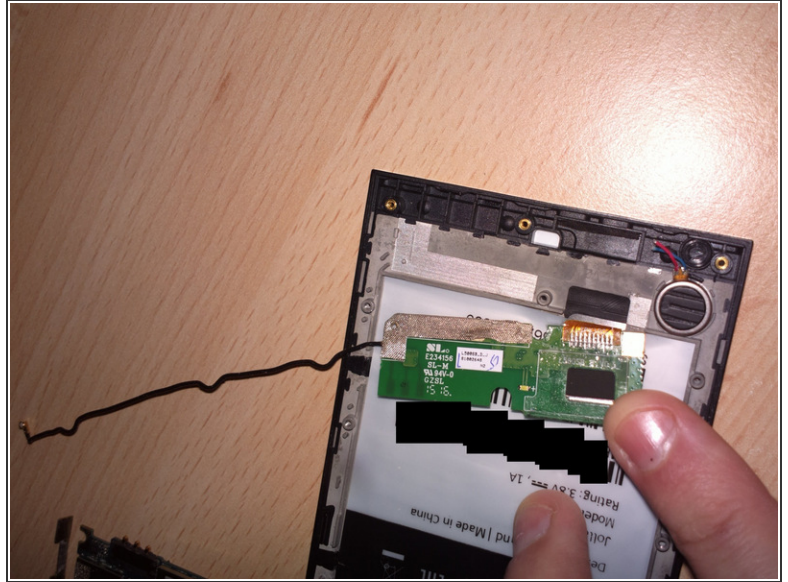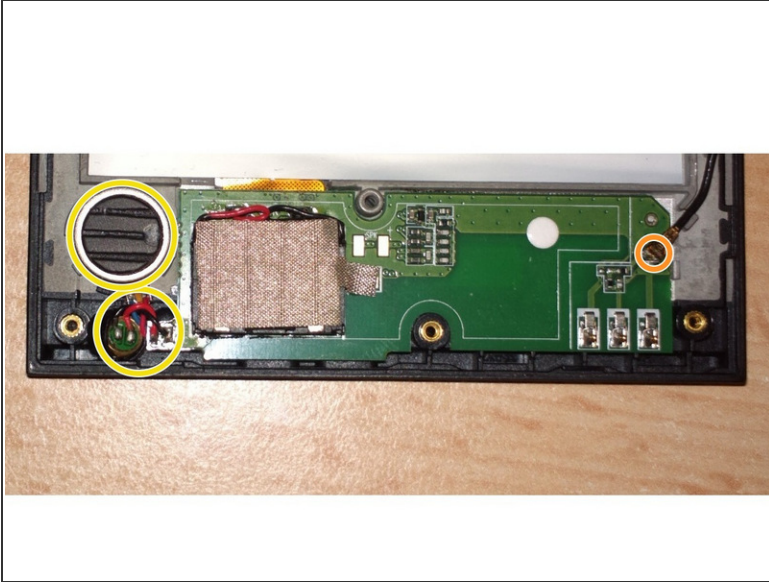

- Remove the antenna cable
 - Remove the speaker and vibration motor from the phone
- ⚠ Both items are stuck to the phone and the cables are very fragile. I broke one of the connections when removing the speaker for a second time, as seen in the second picture. It is possible to solder it back on

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-08-26 06:30:53 PM.